

Your key for Predictive Maintenance

The easiest way to monitor your engine - ACCOMOS®



ACCOMOS®

Acceleration Monitoring


System

A novel three-axle vibration sensor, which has been specifically adapted to the requirements of large engines, to support proactive maintenance.

Ideal for monitoring the permissible limit values of internal combustion engines of >100 kW (DIN ISO 10816-6, www. iso.org).

It has never been easier to install a sensor for recording vibrations: extra-strong magnets make it possible to attach the system in minutes. In most cases, it is not necessary to machine surfaces.

Regardless of whether you use ACCOMOS® as a permanently installed sensor with engines, clutches, or generators, it can detect discrepancies in the vibration behaviour and warn you before anything untoward occurs.

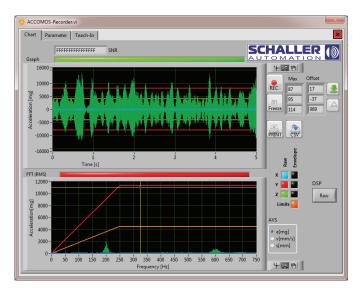



Installing a sensor allows you to monitor the engine such that the system displays (yellow/red) warning thresholds for the vibration behaviour by means of a coloured LED on the sensor.

It is possible to transfer the real time data via CAN or RS485 connections.

Optional evaluation software is available, which, amongst other things, allows you to display and save the real time data on all three axes and to display the frequency spectrum.

The software also offers a teaching function that can be used to determine the thresholds for warnings (yellow/red).


ACCOMOS®


for your Proactive Maintenance

ACCOMOS® monitors compliance with the limit values for vibrations according to DIN-ISO 10816-6 for engines of >100 kW, www.iso.org

Displacement in um (RMS)	Velocity in mm/s (RMS)	Acceleration in m/s^2 (RMS)	Machine vibration classification						
			1	2	3	4	5	6	7
17,80	1,12	1,76	Normal / acceptable Unsatis-	Normal / acceptable					
28,30	1,78	2,79							
44,80	2,82	4,42							
71,00	4,46	7,01							
113,00	7,07	11,10	factory Unaccept- able	Unsatis-					
178,00	11,20	17,60		factory					
283,00	17,80	27,90		Unaccept- able	Unsatis- factory				
263,00	17,00	21,90			Unaccept- able	Unsatis-			
448,00	28,20	44,20				factory			
710,00	44,60	70,10				Unaccept- able	Unsatis- factory		
	,						Unaccept- able	Unsatis- factory	
1125,00	70,70	111,00						lactory	
1784,00	112,00	176,00						Unaccept- able	Unsatis- factory
									Unaccept- able

Dimensions

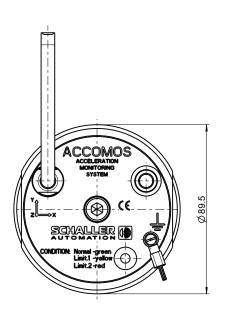

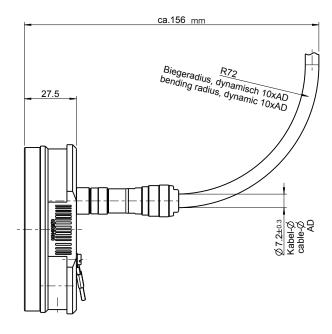



Safety for you and your engine: Worldwide!



