

### Model CV-1F Grooved End Swing Check Valves

## General Description

The TYCO Model CV-1F Grooved End Swing Check Valves are compact and rugged swing-type units that allow water flow in one direction and prevent flow in the opposite direction. A resilient elastomer seal facing on the spring-loaded clapper ensures a leaktight seal and non-sticking operation. The Model CV-1F Check Valves are designed to minimize water hammer caused by flow reversal.

The Model CV-1F Grooved End Swing Check Valves are furnished with grooved ends and can be installed using GRINNELL Grooved Couplings or GRINNELL Figure 71 Flange Adapters. The Model CV-1F Check Valves have been designed with a removable cover for ease of field maintenance. These valves can be installed horizontally (with cover in the upward position) or vertically with the flow in the upward direction (Ref. Figure 3).

A check valve maintenance kit is available to allow backflushing through a fire department connection without removing the Model CV-1F Grooved End Swing Check Valve from the riser. Refer to technical data sheet TFP1555.

Model CV-1F is a re-designation for Central Figure 590F and GRINNELL Figure 590F Grooved End Swing Check Valves.

### NOTICE

The TYCO Model CV-1F Grooved End Swing Check Valves described herein must be installed and maintained in compliance with this document and with the applicable standards of the NATIONAL FIRE PROTECTION ASSO-CIATION (NFPA), in addition to the standards of any authorities having jurisdiction. Failure to do so may impair the performance of these devices.

IMPORTANT

Refer to Technical Data Sheet TFP2300 for warnings pertaining to regulatory and health information. Never remove any piping component nor correct or modify any piping deficiencies without first de-pressurizing and draining the system. Failure to do so may result in serious personal injury, property damage, and/or impaired device performance.

The owner is responsible for maintaining their fire protection system and devices in proper operating condition. Contact the installing contractor or product manufacturer with any questions.

### Technical Data

### Approvals

Compliance with CE Pressure Equipment Directive (PED) and Standards of Engineering Practice

- 2 in. to 12 in. (DN50 to DN300): UL and C-UL Listed, FM Approved, Bureau Veritas
- 2-1/2 in. to 10 in. (DN65 to DN250): VdS Approved Certificate No. G4060018

Sizes

2 in. to 12 in. (DN50 to DN300) **Maximum Working Pressure** UL/FM - 300 psi (20,7 bar) VdS - 16 bar

Valve Assembly Finish Red, non-lead paint





# Installation

The Model CV-1F Grooved End Swing Check Valves are to be installed in accordance with this section:

**Step 1.** The arrow cast on the body must point in the direction of the flow.


**Step 2.** Valves installed vertically must be positioned with the flow in the upward direction.

**Step 3.** Valves installed horizontally must be positioned with the cover facing up (Ref. Figure 3).

**Step 4.** Grooved end pipe couplings used with the Model CV-1F Grooved End Swing Check Valves must be installed in accordance with manufacturer's instructions.

**Note:** Valves should be installed a reasonable distance downstream from pumps, elbows, expanders, reducers, or other similar devices to extend the valve life. Standard piping practices call for a minimum of five (5) times the pipe diameter for general use.

#### **Nominal Dimensions Nominal Pipe Size** Inch Cover Approx. (mm) Bolt Weight Torque Lbs. Valve Size Pipe O.D. Lbs.-ft. (kg) В F (Nm) Inch Inch Α С D Ε J (DN) (mm) 2.37 6.75 1.96 2.57 3.25 4.75 2 1.96 1.62 18 9.0 (50) (60,3)(41,5) (25) (4,5) (171, 5)(49, 8)(49, 8)(65, 3)(82, 3)(120,7)2-1/2 2.88 8.00 5.38 2.63 3.09 3.87 5.87 1.63 39 10.0 (65)(73, 0)(203, 2)(136,7)(66,7)(78, 5)(98,3)(149, 1)(41,7)(54)(4,5)76,1 mm 3.00 8.00 5.38 2.63 3.09 3.87 5.87 10.0 1.63 39 (54)(65)(76, 1)(203, 2)(136,7)(66,7)(78, 5)(98,3)(149,1)(41,7)(4,5)2.81 3.50 8.37 5.72 3.31 3.87 5.87 11.0 1.63 39 3 (84,1) (41,7) (54) (80) (88,9) (145,3) (149,1) (5,0) (212,6) (71,4) (98,3) 4.50 9.63 6.68 3.80 3.63 4.53 7.13 1.84 25.0 50 (100)(114, 3)(244, 6)(169,7)(96, 5)(92, 2)(115, 4)(181,1)(46,7)(69) (11, 3)139,7 mm 5.50 10.50 7.40 4.46 4.13 4.90 7.50 1.75 39 29.0 (125) (139,7)(266,7)(188,0)(113,3)(104, 9)(124, 5)(190, 5)(44,5)(54)(13, 2)5.56 10.50 7.40 4.46 4.13 4.90 7.50 1.75 39 29.0 (125) (141,3)(188, 0)(104, 9)(124, 5)(54) (266,7)(190, 5)(44, 5)(13, 2)(113,3)165,1 mm 6.50 11.50 8.00 4.62 4.50 5.00 7.60 1.85 60 47.0 (150)(165,1) (292,1)(203,2) (117, 3)(114, 3)(127,0) (193, 0)(47,0) (82) (21,3)6.63 11.50 8.00 4.62 4.50 5.00 7.60 1.85 60 47.0 6 (150)(168, 3)(292,1)(203, 2)(117, 3)(114,3)(127, 0)(193, 0)(47, 0)(82) (21,3)5.52 8.63 14.00 10.14 6.67 5.46 8.46 2.13 120 66.0 8 (54,1) (140,2) (200) (169,4) (219,1)(355,6) (257, 8)(138,7)(214, 9)(164)(29,9)10.75 18.00 12.38 8.62 6.41 7.50 10.50 3.00 130 109.7 10 (250) (218,9) (162, 8)(190, 5)(178) (273, 1)(457,2) (314, 5)(266,7)(76, 2)(49, 4)14.28 2.75 12 12.75 21.00 9.93 7.27 130 7.62 10.62 151.0 (300)(323, 9)(533, 4)(362,7)(252, 2)(184,7)(193, 5)(269,7)(69, 9)(178)(68, 0)В А

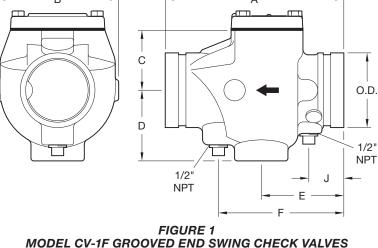

### **Care and Maintenance**

The TYCO Model CV-1F Grooved End Swing Check Valves must be maintained and serviced in accordance with this section.

Before closing a fire protection system main control valve for maintenance work on the fire protection system that it controls, obtain permission to shut down the affected fire protection system from the proper authorities and notify all personnel who may be affected by this decision.


NOMINAL DIMENSIONS

After placing a fire protection system in service, notify the proper authorities and advise those responsible for monitoring proprietary and/or central station alarms.

The owner is responsible for the inspection, testing, and maintenance of their fire protection system and devices in compliance with this document, as well as with the applicable standards

of the NATIONAL FIRE PROTECTION ASSOCIATION (e.g., NFPA 25), in addition to the standards of any authority having jurisdiction. Contact the installing contractor or product manufacturer with any questions. Any impairments must be immediately corrected.

Automatic sprinkler systems are recommended to be inspected, tested, and maintained by a qualified Inspection Service in accordance with local requirements and/or national codes.

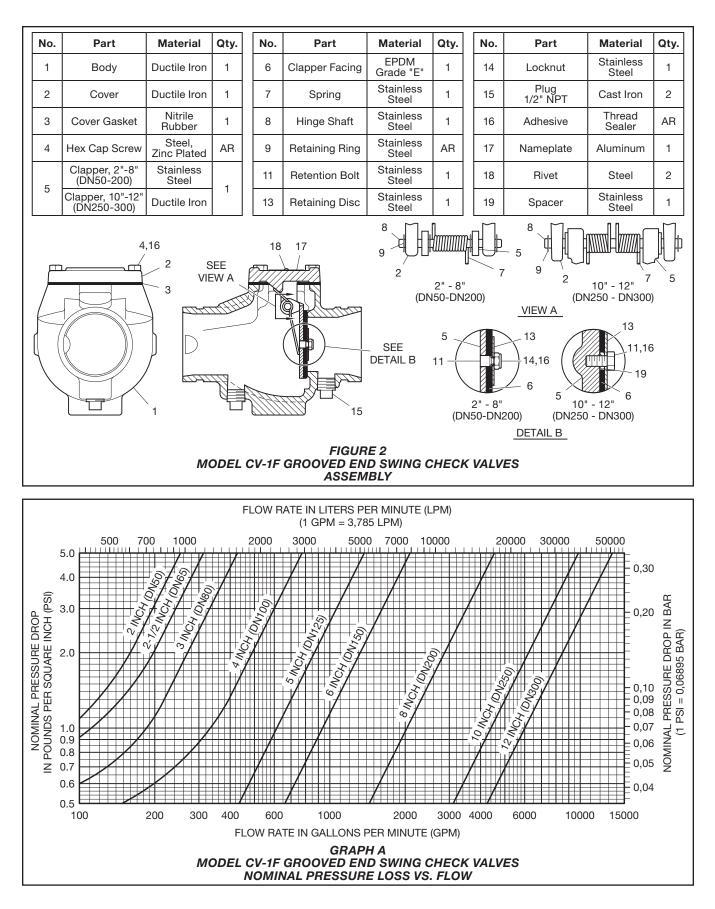


Valve Size Inch (DN)	Pipe O.D. Inch (mm)	Part Number		
2 (50)	2.37 (60,3)	59-590-0-020		
2-1/2 (65)	2.88 (73,0)	59-590-0-025		
76,1 mm (65)	3.00 (76,1)	59-590-0-076		
3 (80)	3.50 (88,9)	59-590-0-030		
4 (100)	4.50 (114,3)	59-590-0-040		
139,7 mm (125)	5.50 (139,7)	59-590-0-139		
5 (125)	5.56 (141,3)	59-590-0-050		
165,1 mm (150)	6.50 (165,1)	59-590-0-165		
6 (150)	6.63 (168,3)	59-590-0-060		
8 (200)	8.63 (219,1)	59-590-0-080		
10 (250)	10.75 (273,1)	59-590-0-100		
12 (300)	12.75 (323,9)	59-590-0-120		

### TABLE A MODEL CV-1F GROOVED END SWING CHECK VALVES PART NUMBER SELECTION

Inch Inc	Pipe O.D.	Cover Gasket Part Number		Clapper Facing Part Number		Clapper Assembly Part Number		
	(mm)	Americas Only	EMEA/APAC	Americas Only	EMEA/APAC	Americas Only	EMEA/APAC	
2 (50)	2.37 (60,3)	595907020	97670501	59020EPDM	59020EPDM	97670201A	97670201	
2-1/2 (65)	2.88 (73,0)	595907030	97561801	59025EPDME	59025EPDM	97562801A	97562065	
76,1 mm (65)	3.00 (76,1)	595907030	97561801	59025EPDME	59025EPDM	_	97562801	
3 (80)	3.50 (88,9)	595907030	97561801	59030EPDME	59030EPDM	97562201A	97562201	
4 (100)	4.50 (114,3)	595907040	97512001	59040EPDME	59040EPDM	97549001A	97549001	
139,7 mm (125)	5.50 (139,7)	595907040	97512001	59050EPDME	59050EPDM	_	97565501	
5 (125)	5.56 (141,3)	595907040	97512001	59050EPDME	59050EPDM	97565501A	97562125	
165,1 mm (150)	6.50 (165,1)	595907060	97521801	59060EPDME	59060EPDM	-	97524101	
6 (150)	6.63 (168,3)	595907060	97521801	59060EPDME	59060EPDM	97524101A	97562150	
8 (200)	8.63 (219,1)	595907080	97547901	59080EPDME	59080EPDM	97592201A	97592201	
10 (250)	10.75 (273,1)	595907100	97600001	59100EPDM	59100EPDM	97598001A	97598001	
12 (300)	12.75 (323,9)	595907120	97600002	59120EPDM	59120EPDM	97647701A	97647701	
TABLE B MODEL CV 15 CROOVED END SWINC CHECK VALVES DEDLACEMENT VALVE DARTS								

MODEL CV-1F GROOVED END SWING CHECK VALVES REPLACEMENT VALVE PARTS PART NUMBER SELECTION

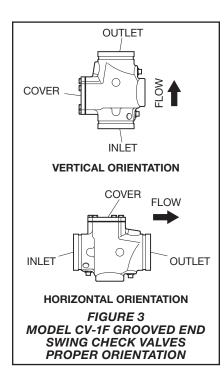

## Ordering Procedure

Contact your local distributor for availability. When placing an order, indicate the full product name and Part Number (P/N).

#### Model CV-1F Check Valve

Specify: Model CV-1F Grooved End Swing Check Valve, size (specify), P/N (specify per Table A)

**Replacement Valve Parts** Refer to Figure 2 to identify Parts.

#### **Cover Gasket**

Specify: Model CV-1F Grooved End Swing Check Valve, Cover Gasket, size (specify), P/N (specify per Table B)

### **Clapper Facing**

Specify: Model CV-1F Grooved End Swing Check Valve, Clapper Seal Facing, EPDM Grade "E", size (specify), P/N (specify per Table B)

#### Clapper Assembly

Includes items 2, 3, 5-14, and 17-19.

Specify: Model CV-1F Grooved End Swing Check Valve, Clapper Assembly, size (specify), P/N (specify per Table B) **TFP1550** Page 6 of 6

1400 Pennbrook Parkway, Lansdale, PA 19446 | Telephone +1-215-362-0700
© 2018 Johnson Controls. All rights reserved. All specifications and other information shown were current as of document revision date and are subject to change without notice.

NATIONAL FIRE PROTECTION ASSOCIATION and NFPA are registered trademarks of National Fire Protection Association

